 
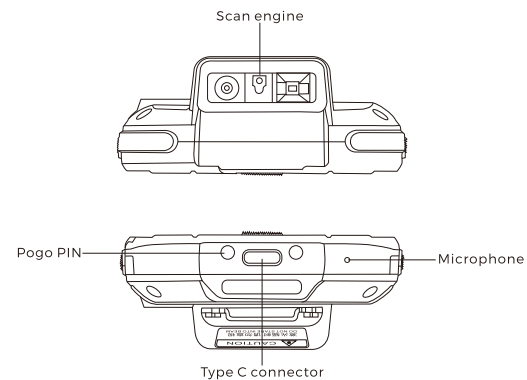 
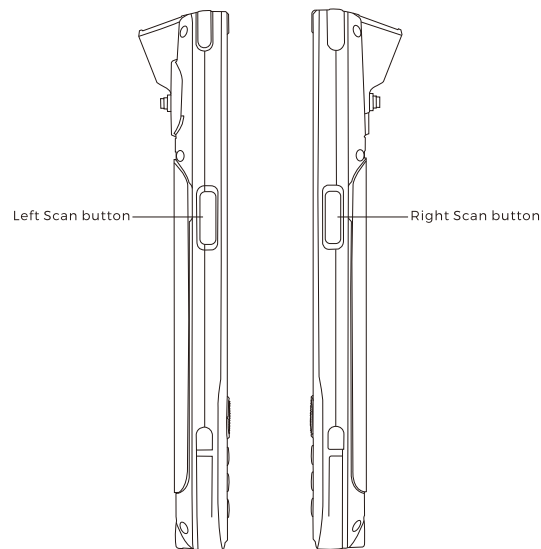 
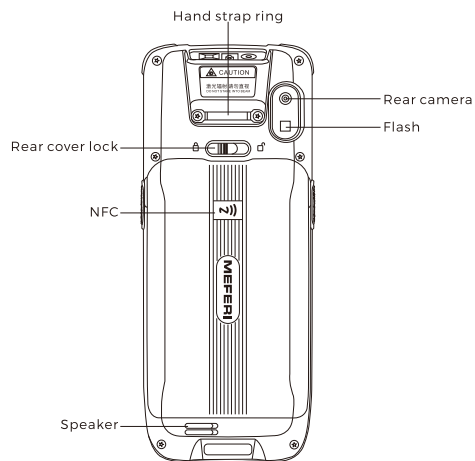 
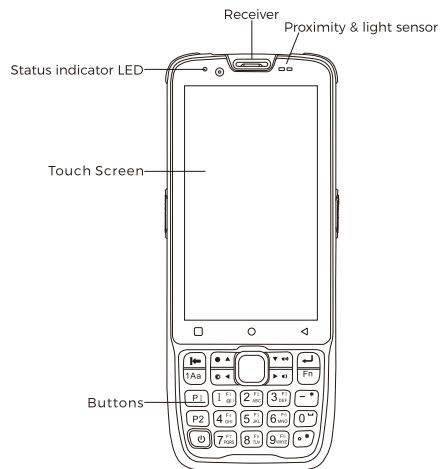 


ME30K Mobile Computer Quick Start Guide

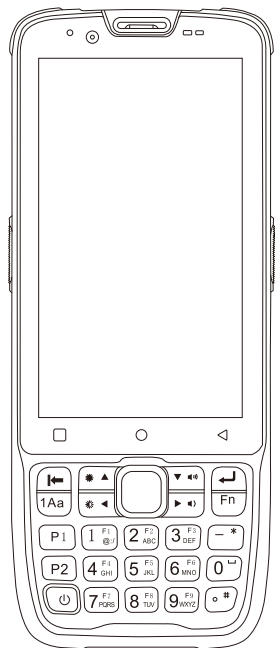

Keypads Introduction

Buttons	Normal FUNC	When press 1Aa	When Press Fn
	Backspace	Backspace	Backspace
	Num & caps lock	Num and caps lock	/
	Scan	Scan	Scan
	Enter	Enter	Enter
	Function key switch	/	Function key switch
	Up	Up	Brightness up
	Down	Down	Volume up
	Left	Left	Brightness down
	Right	Right	Volume down
	1	Switch @ . : /	F1
	2	Switch A.B.C.a.b.c	F2
	3	Switch D.E.F.d.e.f	F3
	4	Switch G.H.I.g.h.i	F4
	5	Switch J.K.L.j.k.l	F5
	6	Switch M.N.O.m.n.o	F6
	7	Switch P.Q.R.S.p.q.r	F7
	8	Switch T.U.V.t.u.v	F8
	9	Switch W.X.Y. Z.w.x.y.z	F9
	Custom button	Custom button	Custom button
	Custom button	Custom button	Custom button
	-	-	*
	0	0	Space
	.	.	#
	Power on/off	Power on/off	Power on/off

 
Package Contents

- Device×1
- Battery×1
- Power Adapter×1
- USB Cable×1
- Wearable strap×1
- Quick Start Guide×1

Instructions for Unpacking

SIM card/SD card installation

Open the battery cover and slide the SIM card to the card slot in the direction indicated by the arrow shown in the picture.

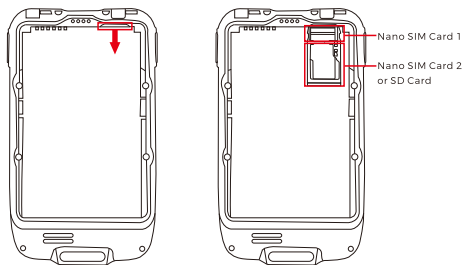


Note:

- SIM card 1, SIM card 2 are Nano SIM cards.
- Overexertion should be avoided when installing or removing the battery.

Battery installation

 
Install the battery in the direction as show.

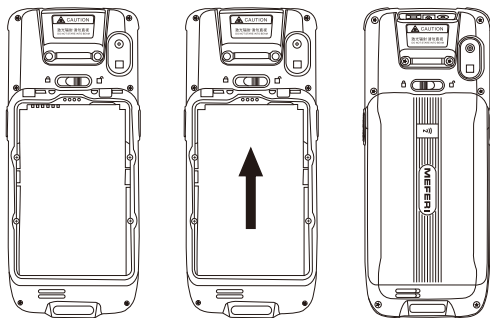

Instructions for Charging

Connect the USB-A port to the adapter, and the other end to the device

 Input: 100-240V-50/60Hz 0.6A
Output: 9.0V≡2.0A



Power Adapter



USB Cable

Power Options

- Power on: Press and hold the power button until the device boots up animation.
- Power off: Press and hold the power button until a pop-up window appears and then click "Power off".
- Restart: Press and hold the power button until a pop-up window appears and then click "Restart".

Indicator

Battery	<input type="checkbox"/>	Full power
	<input type="checkbox"/>	Medium power
	<input type="checkbox"/>	Low power
Network Signal	<input checked="" type="checkbox"/>	Good signal
	<input checked="" type="checkbox"/>	Unstable signal
	NONE	SIM card not installed.
WiFi	<input checked="" type="checkbox"/>	No service.
	<input checked="" type="checkbox"/>	WiFi connected
	NONE	WiFi switched off

Precautions

- Read all information in this guide before using the device to ensure safe and proper operation.
- Please use the accessories that have been approved by MEFERI and corresponds to this model. Use of any power source, charger, battery, etc. that has not been approved by MEFERI may cause a fire, explosion, or other hazards.

3. Please use device and accessories within the specified temperature range. Equipment failure may occur when the ambient temperature is too high or too low.

4. If the battery is not detachable, please do not replace the battery by yourself in case of any damage to the battery or the device. The battery shall be replaced by authorized service centers only.

5. Do not disassemble the product and its accessories. If the equipment or any of its components are not working properly, please contact and consult our after-sales service center, or send the device to our after-sales service outlets for testing and servicing.

6. If the battery shows abnormal signs of peculiar smell, overheat, color change, distortion or leakage, remove the battery from the charger or the device immediately and stop using it.

7. The battery is made from a flammable and explosive material. Do not disassemble, squeeze, drop and make any other destructive operations on the battery. Do not place the battery in high temperature.

8. Disposal of used batteries is subject to local relevant documents or policies regarding disposal of used batteries.

Warranty Policy

Warranty terms:

- Under normal circumstances, the warranty period of the device is 12 months, 3 months for accessories, subject to the sales agreement.
- During the product warranty period, under the normal use conditions (determined by our technical staff), the user will be entitled to a free warranty for damaged or faulty warranty parts.
- During the warranty period, faults caused by repair, disassembly or modification of the product by a personnel other than our company, improper installation, improper use by the user (failure to follow

instructions), serial number damage, accident or natural disaster, will not be covered under the warranty.

4. The warranty will expire immediately if any alterations are made to the warranty card.

5. Please show the equipment SN and purchase certificate for repair.

The company reserves the right to interpret the above contents.

6. If you have trouble using the device, please e-mail to meferi@meferi.com.